

LED CONTROLLER PANEL MANUAL





General Description:

Our LED Controller Panel was designed specifically for our WDM Par Cans & Wall Washers. Perfect for temporary installations or for those that are not "DMX friendly" and don't care to be.

Specification:

POWER IN:	9-12V 300mA
POWER CONSUMPTION:	3.6 W
SIZE:	8.6" X 5.5"

Diagram:

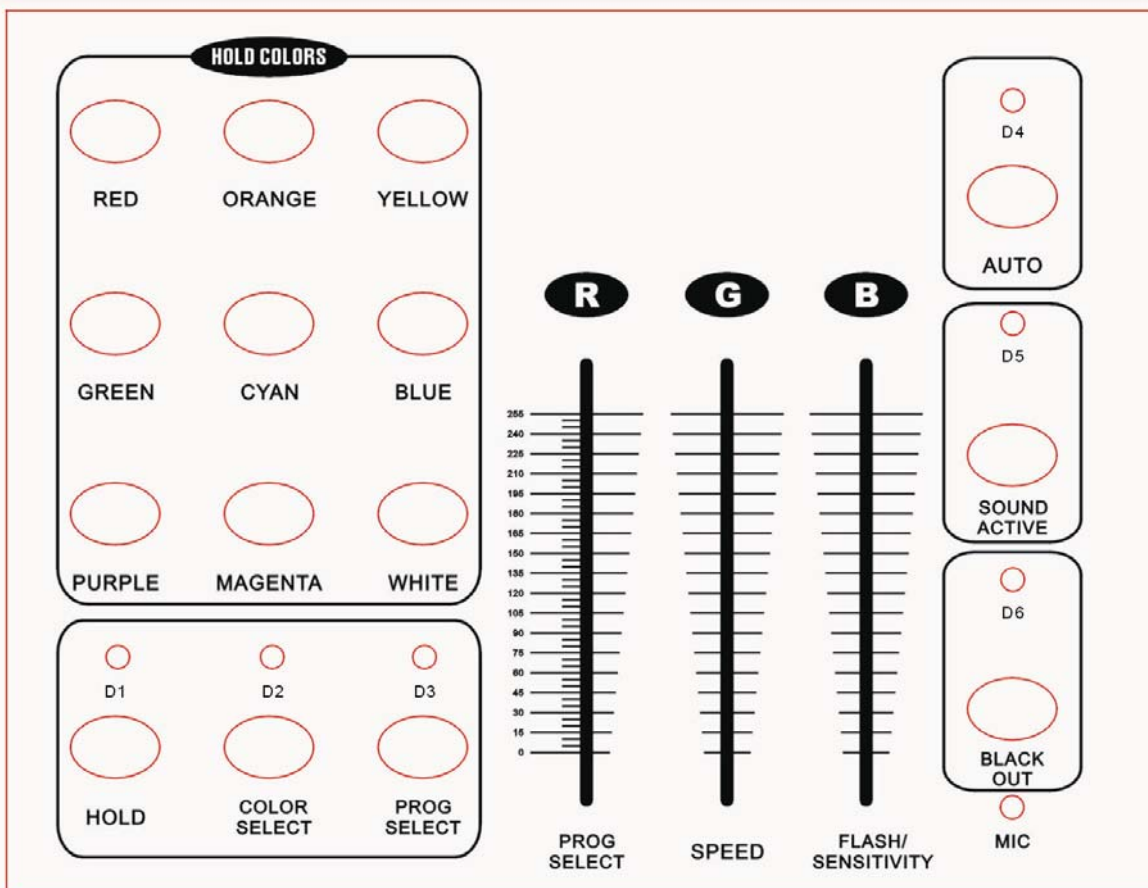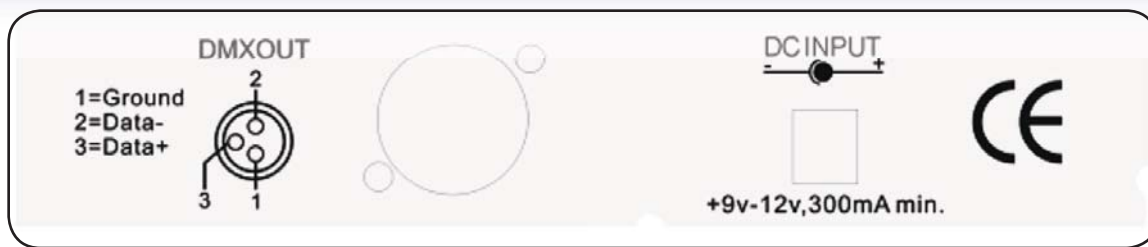

LED CONTROLLER PANEL MANUAL

Operations:

- 1. Set your dip switch #10 on and the others turned off.**
- 2. Select color mode:**
Select one of nine colors. Press color select and then select your color. You can also push R, G, and B sliders to adjust red, green or blue.
- 3. Select built-in programs mode:**
Press "PROG SELECT" button and then select the built-in programs via "PROG SELECT" slider, change the running speed via the "SPEED" slider and the frequency of flash (under sound activated to adjust the sound sensitivity) via the "flash/sensitivity" slider.
- 4. Auto run mode:**
Press "AUTO" button for it to run the fixtures from a combination of different color changing effects. You can change the running speed via "SPEED" slider and the frequency of flash via the "flash/sensitivity" slider.
- 5. SOUND ACTIVE mode:**
Press "SOUND ACTIVE" button can control your lights to the beat of the music. Then you can change the sound active sensitivity via the "flash/sensitivity" slider.
- 6. The hold button will allow you to lock in your favorite show.**
When power is turned off and back on, it will play that scene from memory.