

Pavo Dial Controller

Wall-Mounting Instructions


Step 1:

Remove the rotary dial knob from its stem (A).



Step 2:

Place a flat-head screwdriver between the faceplate and back plate (B) and carefully separate them (C).

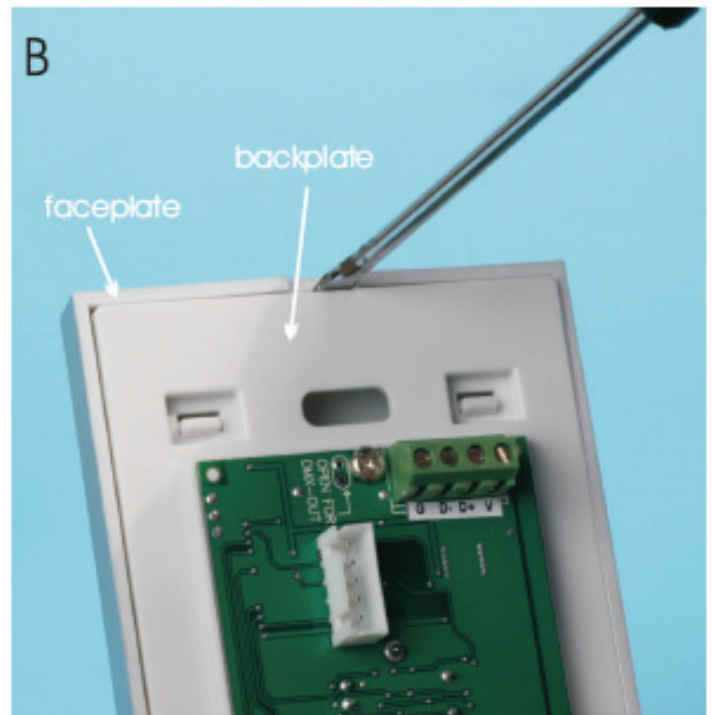


Pavo Dial Controller

Wall-Mounting Instructions


Step 3:

Attach the back-plate (D) to a standard junction box or the case provided (see G) using the screw holes (circled).

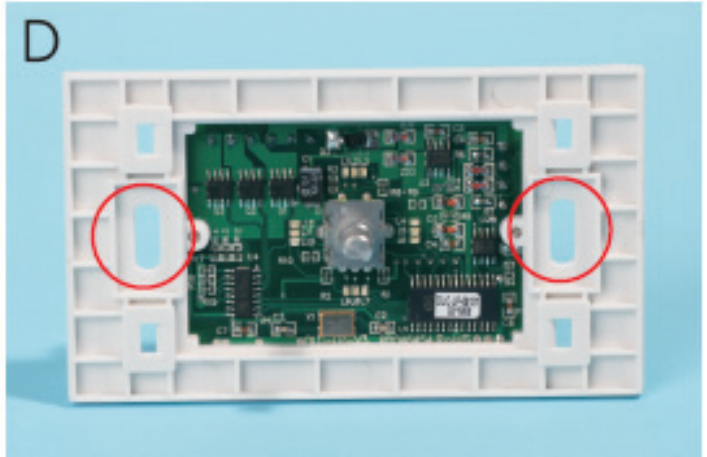

Step 4:

Push the faceplate back onto the back plate (E).

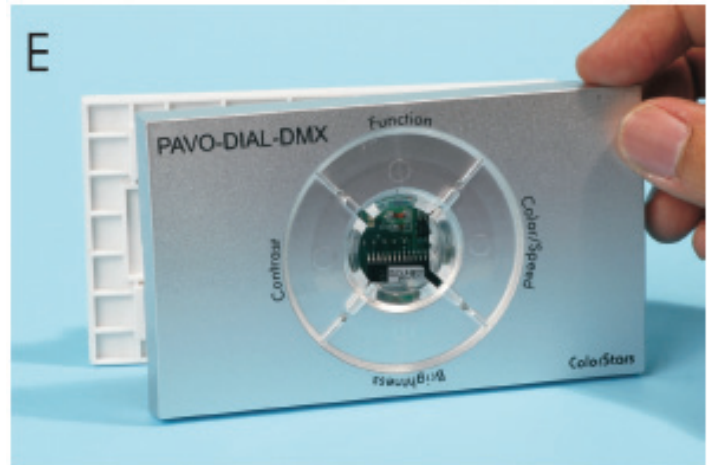

Step 5:

Push the rotary dial knob back onto its stem (F).



Pavo Dial Controller

Wall-Mounting Instructions

